



1455 Kleppe Lane +Sparks, NV 89431-6467 +(775) 359-4712 +Fax (775) 359-7424 E-mail: <u>haws@hawsco.com</u> + website: <u>www.hawsco.com</u>

No. 0510002203 (1)

Model 1011HS, 1117HS, AND 1119HS DUAL FOUNTAIN ARCHITECTURAL BOTTLE FILLER, REAR ACCESS

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS warrants that all of its products are guaranteed against defective material or poor workmanship for a period of one year from the date of shipment. The foregoing notwithstanding, HAWS warrants certain specific products or components thereof for an adjusted period. A list of these excepted products and components and a description of their respective warranty terms may be found here: www.hawsco.com/warranty. HAWS' liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first-class workmanship, provided that a claim is made in writing to Company within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS shall not be liable for the cost of repairs, alterations or replacements, or the labor required to implement them, or for any expense connected therewith made by the owner or owner's agents, except upon written authority from HAWS. HAWS shall not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that HAWS has made no other warranties either express or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, incidental, or consequential damages claimed to arise under the contract of sale.

Equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. Any HAWS emergency equipment is intended to supplement first-aid treatment. Due to widely varying conditions, HAWS cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

EXCEPT AS EXPRESSLY STATED HEREIN, HAWS HEREBY DISCLAIMS ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY MAY NOT BE MODIFIED OR EXTENDED WITHOUT THE WRITTEN CONSENT OF HAWS. REMEDIES AND REPLACEMENTS STATED HEREIN ARE EXCLUSIVE. IN NO EVENT SHALL HAWS BE LIABLE FOR ANY SPECIAL, PUNITIVE, CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF USE OR PROFITS, SUBSTITUTE PRODUCTS OR COSTS, PROPERTY DAMAGE, OR OTHER MONETARY LOSS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:

 TECHNICAL SUPPORT:
 1-800-766-5612

 FOR CUSTOMER SERVICE:
 1-888-640-4297

SAFETY PRECAUTIONS

CAUTION: Disconnect electrical power to unit before installing or servicing. Note that some models have more than one connection to the electrical supply.

NOTICE:

- A. The electrical connection must have code-approved ground-fault circuit interrupter (GFCI) protection for personnel.
- B. Care should be taken not to damage refrigeration system lines or electrical wires during installation.
- C. Installation must conform to all applicable codes and standards.
- D. Maintain 8 inches (20cm) separation from filter circuit board (antenna) at all times.

REQUIRED TOOLS (OR EQUIVALENT):

- Adjustable Wrench
- □ 1/2" Socket or Box end Wrench
- □ 3/8" Socket or Box end Wrench
- □ 9/16" Deep Socket or Box end Wrench
- □ 1/4" bit-holding screwdriver
- □ T20 bit (supplied)
- Clean cloth or paper towels
- □ Tubing cutter for polyethylene tubing
- Hacksaw
- Tape Measure
- Bubble level
- Permanent marker

REQUIRED PARTS (NOT SUPPLIED):

- □ P-trap(s) (1-1/2" recommended) with appropriate seal for 1-1/4" OD tailpiece and waste bend
- □ Suitable trap adapter(s) (if not already installed see installation drawing for details)
- □ Additional waste plumbing as needed (1-1/2" recommended)
- Suitable angle stop valve with 3/8" compression outlet (if not already installed see installation drawing for details)
- □ 16X 5/16" fasteners suitable for fastening frame to structural material in wall.
- □ Plastic cup (for bleeding air out of system following install)

LOCATION OF UNIT: <u>Access to the back side of the wall is required to install and maintain</u> <u>these models</u>. These models are suitable for indoor use only. These units are unsuitable for corrosive environments (such as enclosed chlorinated pool areas) or very dusty areas. The ambient air temperature must be maintained between 40°F and 104°F at all times. Installation into a location not meeting these limitations will void the warranty.

SUPPLY LINE: The min recommended size is 1/2"IPS with 20-105 psig (1.4-7.1 ATM) flowing pressure. Where sediment or mineral content is a problem, an upstream water pre-filter is recommended. Do not use with reverse osmosis (RO) water.

PLUMBING CONNECTIONS: Inlet is 3/8" OD polyethylene tubing. A suitable plastic ferrule and metal insert are provided to allow direct connection to a 3/8" compression water stop valve. Tailpiece is 1-1/4" OD ABS and waste bend is 1-1/4" OD brass.

ELECTRICAL CONNECTION: 120VAC/60HZ GFCI-Protected circuit, min 15A service. Dedicated circuit recommended.

INSTALLATION PROCEDURE

GENERAL NOTES:

- For all plastic push-in type fitting connections, only connect NSF-61 soft-copper or plastic tubing. These instructions must be followed to ensure a watertight connection:
 - a. If tubing needs to be shortened, cut tubing square and clean.
 - b. Mark from end of tube the depth of insertion (See table below).
 - c. Push tube into the fitting until it bottoms out.
 - d. To remove, depress collet and pull tubing out.

Tube OD Size	OD Tolerance	Insertion Depth		
3/8"	±.004"	3/4"		

• All units ship with both a filter and strainer. The built-in RFID system will determine whether a filter or strainer is installed and configure the unit accordingly.

A. INSTALLATION STEPS:

- 1. Verify that the wall cavity, water supply/valve, and drain locations are all in accordance with the installation drawing.
- 2. Follow the instructions outlined in the installation drawing (pages 12-22) to install the unit.
- 3. NOTE: The unit is provided with a both a Strainer (110 micron) and a Filter. If desired, install the strainer cartridge instead of the filter cartridge. Strainer cartridge should be replaced every 5 years.


B. START-UP:

- 4. Open the water supply valve and check the system for leaks.
- 5. Reconnect power at the breaker panel, then place a cup under the nozzle of the bottle filler and run the water until the air has been purged out of the water line.
- 6. Place a cup over a bubbler (to minimize splattering) and push the front button to activate the bubbler flow. Keep the button depressed until all air is purged out of the water line.
- 7. NOTE: If the unit has a filter, run the bubbler for 10 minutes in order to properly flush the filter.
- 8. If a high/low unit has been installed, place a cup over the high side bubbler and push the front button to activate the bubbler flow. Keep the button depressed until the air has been purged out of the water line.
- 9. Remove protective plastic film from the upper and lower stainless-steel panels.
- 10. The stainless steel panels can be cleaned with stainless steel cleaner and a clean cloth or paper towel. Do not allow the cleaning fluid to touch the plastic parts of the unit.

C. OPTIONAL PROGRAMMING INSTRUCTIONS:

To enter programming mode, press the Haws logo on the display at the front of the unit (Figure 1) until the up/down arrow keys and "select" appear on the bottle filler display. Programming mode enters at the top-level menu. In general, the up/down arrows and select keys work as follows;



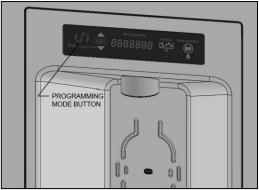

Up/Down Arrows – Cycle through the top-level menu items or values in the programmable fields

Figure 1: Programming Mode Button viewed from front of unit

Select – enters programming of the associated top-level menu from from item, or sets value and advances to next programmable field, or programs value (indicated by value flashing) prior to returns to the main menu

The following Programming Mode Table can be used as a guide while programming the unit. Settings are retained during power outages.

Programming Mode Table					
Top-Level Menu	Arrows (cycle through)	Select	Default		
Backlight	100%, 75%, 50%, 25%, Cancel	Percentage Value - programs brightness Cancel – returns to main menu	100%		
Sensor	Range (rng) from 1 to 10, Cancel	Range 1 to 10 - programs range Cancel – returns to main menu NOTE: A range halfway between sensor lens and closest side of water stream is recommended			
Errors (displays as Error5)	No Errors – None or Cancel. Errors - error codes (see Error Code Table for details), Clear, and Cancel	None or Cancel – returns to main menu Error Code – shows human readable (see next Arrow) Clear – clears error codes Cancel – returns to main menu	None		
Set Day	Days of week or Cancel	Day of week – programs day Cancel – returns to main menu	Sunday		
Time	Hour from 1 to 12, or Cancel Minute from 00 to 59, or Cancel A, P, or Cancel	1 to 12 – programs hour of day 00 to 59 – programs minute of hour A or P – programs 12-hour clock AM or PM Cancel – returns to main menu	12:00A		
Energy*	M-F, Sa-Su, and Cancel	M-F or Sa-Su - enters programmable energy saving for that portion of the week and advanced to hour to turn ON energy saving mode Cancel – returns to main menu	Mon-Fri = disable Sa-Su = disable		
	On 1 to 12, disable, or Cancel	On 1 to 12 – sets hour to turn "ON" energy saving and advance to A or P field (see Note 1) disable – turns "OFF" energy saving for that portion of the week (i.e. Mon-Fri or Sa-Su) and returns to main menu Cancel – returns to main menu without changing program			
	A, P, or Cancel	Sets 12-hour clock AM or PM and advanced to programming OFF time (see Note 1) Cancel – returns to main menu with changing program			
	Off 1 to 12, or Cancel	Off 1 to 12 – sets hour to turn "Off" energy saving and advance to A or P field (see Note 1) Cancel – returns to main menu without changing program			
	A, P, or Cancel	Sets 12-hour clock AM or PM and advanced to OFF setting (see Note 1) Cancel – returns to main menu without changing program			
Review		Cycles through time, day, energy program, backlight setting, sensor setting, filter usage, and errors codes	N/A		
Reset	Cancel or Yes	Cancel – returns to main menu without factory reset Yes – resets to factory defaults, but saves bottle count	See defaults above		
EW	No arrow or select function. Displays firmware revision number for Electric Water Cooler circuit board.				
DS	No arrow or select function. Di	splays firmware revision number for Bottle Filler circuit board.	N/A		
Abort		Exits programming mode	N/A		

D. MAINTENANCE

D.1. CLEANING

- •
- touch the plastic parts or the bottle filler.

- Plastic parts (including bottle filler nozzle):
 - A clean towel, dampened by warm water with or without a small amount of mild hand dishwashing detergent.
- Periodically clean the strainer located in the drinking fountain valve body(s). Refer to 5874 Series Valve Manual for more information.

 
D.2. FILTER/STRAINER REPLACEMENT

Caution: Take care not to damage the circuit board located behind the filter head during the following steps.

- Remove the (2) lower panel screws (T20 Torx). Then remove the lower panel by 1. sliding down and away from the unit.
- 2. Place a towel below the filter to collect the small amount of water that may drip from the filter head or filter during the next steps.
- Optional: Turn the water supply valve to the off position, and bleed pressure from the unit by operating the bottle filler. This will improve the ease of replacing the filter. 3.
- Remove filter by turning about ¼ turn clockwise (as viewed from above) and pulling downward. See Figure 2. a. NOTE: There is no need to shut off the supply valve, as the filter head has 4.
 - a built-in valve. If you are planning to leave the unit without a filter cartridge for a protracted period of time, shut off the supply valve.
- Install the new filter by pushing upward and turning counterclockwise. 5.
- 6. Using a cup to catch the water flow, bleed air out of the bottle filler nozzle by
- activating the water flow until the air is purged out. Run water through the bottle filler for 10 minutes to properly flush the filter. 7.

D.3. FUSE REPLACEMENT

- Turn the water supply valve to the off position, and bleed pressure from the unit by operating the bottle filler. 1. 2.
- Turn off power to the unit.
- 3. Remove (2) T20 Torx screws underneath the molded corner covers on both the left and right side of the bottle filler platform. See Figure 3. NOTE: for 1109/1119 models, fountains must be removed to access these screws.
- Remove (2) T20 Torx screws behind molded corner covers and (1) T20 Torx screw behind bottle filler nozzle. 4.
- 5. Tilt out metal bottle filler alcove assembly and disconnect water line and electrical wire harnesses on backside of display. Remove (2) T20 Torx panel screws securing main board cover.
- 6. 7. Remove blown fuse, taking care not to damage the circuit board.
- Replace fuse according to the following table. (2) Spare Fuses are included inside bottle filler enclosure. Make sure fuse 8. is centered in clips before pressing into place.



Replace main board cover, reconnect water lines and electrical wire harnesses, replace alcove mounting screws & molded corner covers, reconnect power, turn on water.

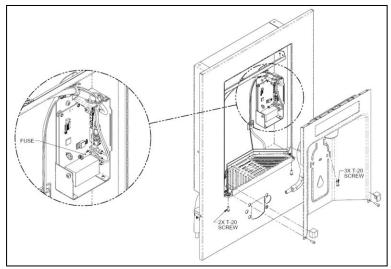


Figure 3 Fuse Replacement on Main Board, Behind Bottle Filler Alcove

E. GENERAL OPERATION

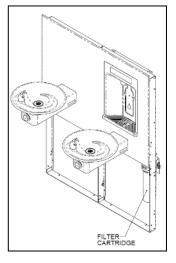


Figure 2 Filter Replacement

E.1. USING THE BOTTLE FILLER

- Insert a bottle below the nozzle to activate the water flow.
- Remove the bottle from below the nozzle to stop the water flow.

E.2. FILTER LIFE

• The filter is designed to last for a maximum of 1 year or 3,000 gallons, whichever comes first.

E.3. STRAINER LIFE

• The strainer is designed to last for a maximum of 5 years. Replace at 5 years or if a reduction in flow rate is observed, whichever comes first.

E.4. SMART ENERGY SAVING

The filtered and/or bottle filler units are set to Smart Energy Saving as the factory default. These
units will automatically save energy by dimming the display when there has been no recent use of
the unit.

F. NOTIFICATIONS

F.1. MAIN BOARD INDICATION LIGHTS

*Located inside upper enclosure behind Bottle Filler Alcove.

- Power = Red LED
 - Solid ON when power is applied
- Filter = Blue LED (Filtered units only)
 - Solid ON Filter life 100% to 11% remaining
 - Intermittent Flash (once/3 second) Filter life 10% to 0% remaining
 - Rapid Flash (once/second) Filter life expired
- Energy Saving = Green LED
 - o OFF Energy Saving Mode disabled
 - Solid ON Energy Saving Mode enabled
 - Intermittent Flash (once/3 second) Bottle Filler is deactivated due to stuck button or sensor issue. Clean sensor lens and cycle power to unit.
 - Rapid Flash (once/second) Actively saving energy

F.2. BOTTLE FILLER DISPLAY INDICATION

- Bottles Saved: Indicates approximately 1 bottle saved for each 17oz dispensed from the bottle filler.
- Filtering Icon (Indicating Installed Filter):
 - Solid ON at all times 100%-11% filter capacity remaining
 - Pulsing when not activated 10%-1% filter capacity remaining
 - OFF 0% filter capacity remaining (filter expired)
- Energy Efficiency Icon
 - Solid ON = Basic or Programmable Energy Saving Mode enabled
 - Intermittent Flash = Unit actively saving energy
 - OFF = Energy Saving Mode disabled

G. OPTIONAL HARDWARE SETTINGS

- Some features may be disabled using the DIP switches located on backside of display. All DIP switches are configured from the factory in the OFF (down) position. See Figure 4.
 - DIP Switch #1 Switch to ON to Disable Haws logo programming button, to prevent inadvertent user access
 - DIP Switch #2 Switch to ON to Disable Auto Purge Feature

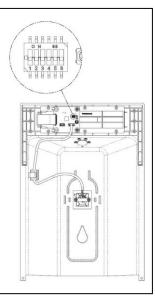


Figure 4: DIP Switch on Backside of Display

H. TROUBLESHOOTING

	TROUBLESHOOTING				
Sup	Note: If the suggested items in the checklist fail to solve the problem, contact Haws Technical Support at 1-800-766-5612. Please have available the model number, serial number, detailed description of the problem, bottle count, and specific error messages (if applicable). PROBLEM REPAIR CHECKLIST				
1.	No water flow from bottle filler	 a. Check if filter has expired. b. Verify supply valve(s) are open and there is water pressure to the c. unit. Verify power to the unit. Check and replace fuse if it is blown (all models have a fuse). e. Clean the bottle filler sensor lens with mild detergent and water. Activate sensor/pushbutton and listen for a click or a hum to indicate whether the solenoid valve is working. 			
2.	"RFID error" or "Install Filter" message despite filter being present and not expired	 a. Power cycle unit by unplugging and replugging main power cord. b. Check for damage to the RFID circuit board above the filter. c. Check that the filter has an RFID tag attached to it and that it faces the RFID circuit board. d. Check wiring between main circuit board and RFID circuit board for damage. e. Try a new filter if available. 			
3.	Low water flow from bottle filler	 a. Replace filter. b. Verify minimum 20 psig supply pressure. c. Verify supply valve is in full open position. d. Unscrew aerator/nozzle and flush with clean water. e. Replace aerator/nozzle. 			
4.	Water leaking	a. Shut off water supply and contact Haws Technical Support 1-800-766-5612.			
5.	Water from bottle filler nozzle excessively splatters when contacting drain basin	a. Unscrew aerator and flush with clean water.b. Replace aerator.			
7.	Bottle filler flows water by itself or flows erratically	a. Unit self-purges every 24 hours if not used.b. Clean the bottle filler sensor lens with mild detergent and water.c. Adjust sensor range (see programming table)			
8.	No lights and no water flow	a. Check that wall outlet has powerb. Check fuse. If it is blown, check for short circuits. If a short is found contact Haws Technical Support. If not, replace fuse.			
9.	Insufficient bubbler flow	 a. Check that inlet stop valve is in wide-open position. b. Verify minimum 20 psi flowing supply pressure. c. Clean strainer. See 5874 Series Valve Manual. d. Adjust valve to increase flow. Use front adjust screw or see 5874 Series Valve Manual. e. (1001/1011 Fountains) Clean screens (inside nozzle body). Unscrew nozzle insert and very gently activate water supply to pop out qty. 3 screens (be careful not to lose screens). Remove any debris clogging the screen openings and place back into nozzle body. Reassemble nozzle insert. 			

ERROR CODE TABLE TROUBLESHOOTING				
Note: If the suggested items in the checklist fail to solve the problem, contact Haws Technical Support at 1-800-766-5612. Please have available the model number, serial number, detailed description of the problem, bottle count, and status of the indication lights. ERROR CODE REPAIR CHECKLIST				
E012 – SENOB Bottle filler sensor is obstructed	 a. Clear error in programming mode and power cycle unit and check error to validate. b. Remove obstruction from aperture Clean aperture with soft cloth that won't scratch aperture. c. Check aperture for excessive scratches 			
E014 – RFID RFID board lost communication	a. Clear error in programming mode and power cycle unit and check error to validate.b. Check cable connection to RFID board.			
Error5	This is not an error. This is how the screen displays the "Errors" menu option.			

I. FEDERAL COMMUNICATIONS COMMISIONS (FCC) and INDUSTRY CANADA (IC) COMPLIANCE STATEMENTS

I.1. FCC Compliance Statement

I.1.1. Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

I.1.2. Part 15.21

Any changes or modifications to this equipment not expressly approved by Haws Corporation may cause harmful interference and void the user's authority to operate this equipment.

I.1.3. FCC ID

FCC ID: 2AUAN-12XXSM

I.2. Formal notices required by the Industry Canada ("IC")

I.2.1. Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Declaration de Conformité

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;


2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

I.2.2. IC ID

IC ID: 25359-12XXSM


*For more information about Haws products, see our website: www.hawsco.com


© 2024 Haws[®] Corporation – All Rights Reserved HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.

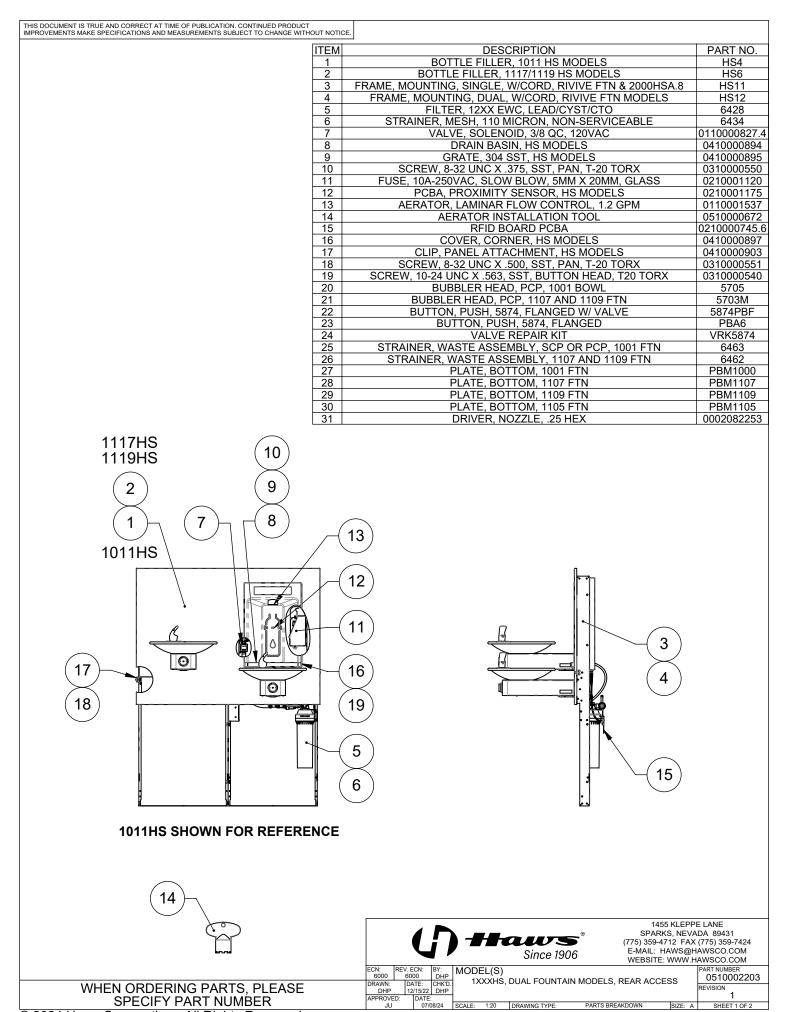


© 2024 Haws Corporation - All Rights Reserved.

 HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.



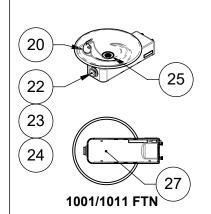

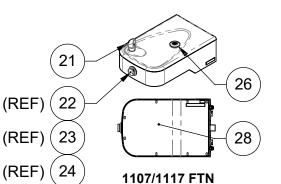


(REF)

21

BUBBLER

1107 & 1109 FTN

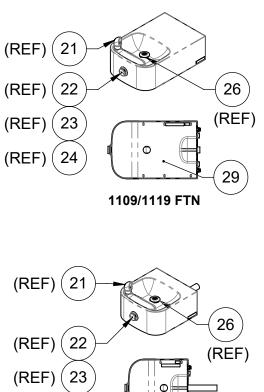


1105 FTN


(1119 HIGH SIDE FTN)

24

(REF)

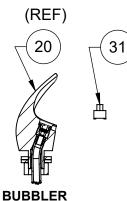

1001 FTN

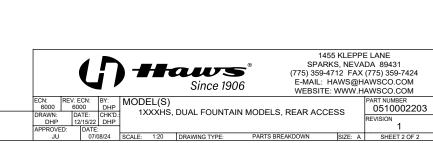


WHEN ORDERING PARTS, PLEASE SPECIFY PART NUMBER


© 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation. SHEET 2 O

SIZE:

30

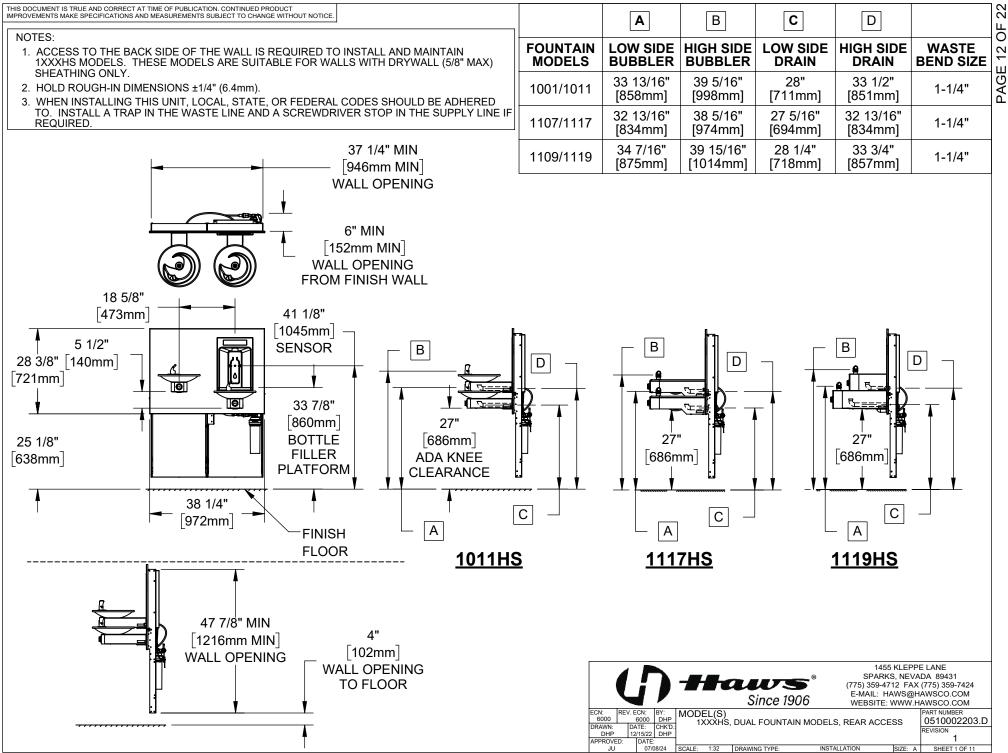

PAGE 12 OF 22

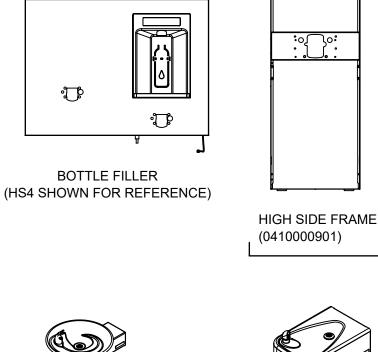



HS MODEL #	BOTTLE FILLER	LOW SIDE FRAME	HIGH SIDE FRAME	LOW SIDE FOUNTAIN	HIGH SIDE FOUNTAIN	LOOSE PARTS KIT
1011HS	HS4	HS11	0410000901	HS7	HS7	HS106
1117HS	HS6	HS11	0410000901	HS8	HS8	HS106
1119HS	HS6	HS11	0410000901	HS9	HS10	HS106
Interview Constraints of the second s						
DRAWN: DATE: CHKD. DATE: 1					ESS 0510002203.D	

07/08/24 SCALE: 1:20 DRAWING TYPE: INSTALLATION JU SIZE: A © 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.



٩Ţ

BOTTLE FILLER



(0410000901)

း၀{

<u>}</u>°;

1117 FOUNTAIN (2X, HS8)

HS12



 
FOUNTAIN (HS9)

 $\frac{1}{2}$

း၀{


LOW SIDE

FRAME (HS11)



1119 HIGH SIDE FOUNTAIN (HS10)

MODEL AND COMPONENT OVERVIEW

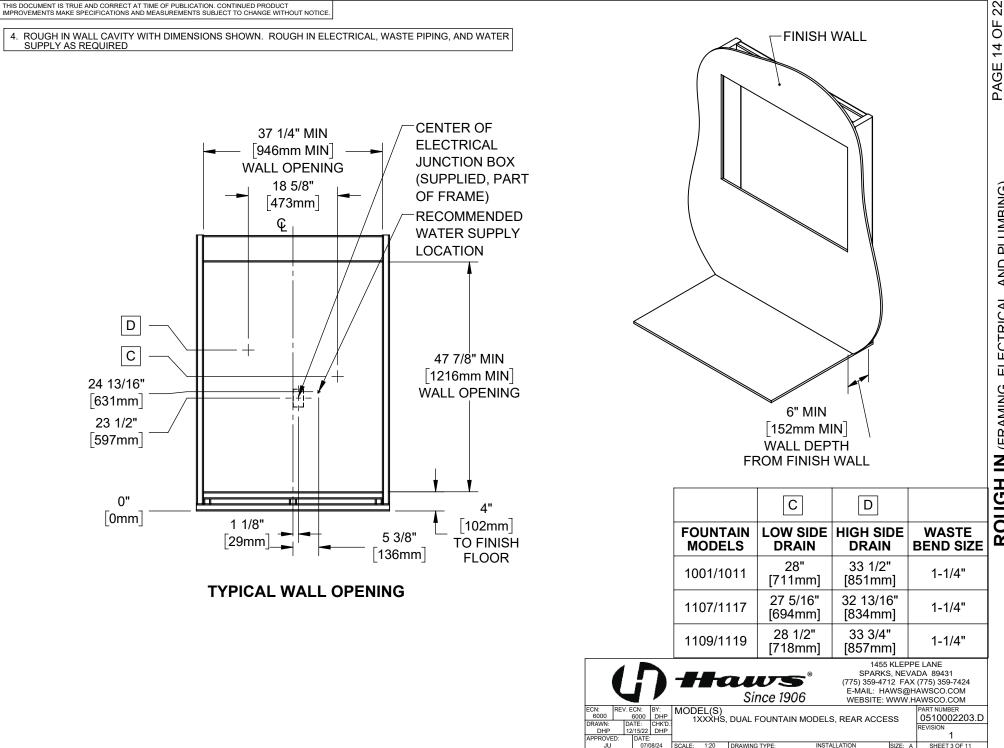


22 DATE: 07/08/24 1:20 DRAWING TYPE JU SCALE: © 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

ROUGH IN (FRAMING, ELECTRICAL, AND PLUMBING)

PAGE 14 OF

22 ЧO 4

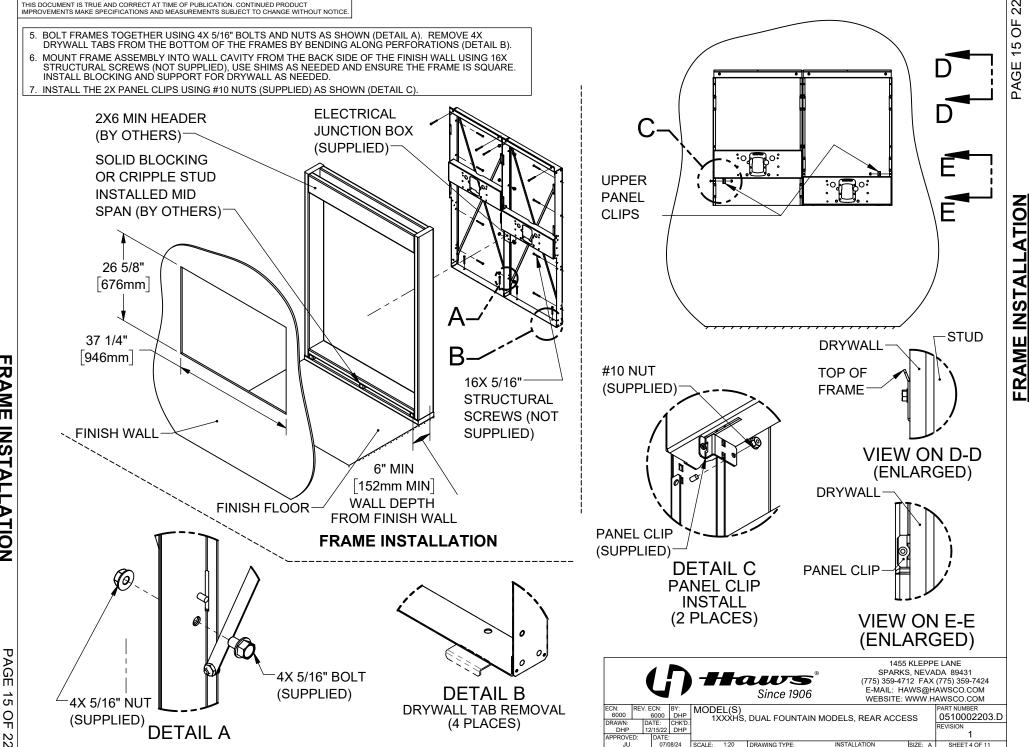



FRAME INSTALLATION

8. REMOVE SHIPPING BRACKETS FROM RIGHT AND LEFT FRAME (DETAIL F).

9. INSTALL FILTER HEAD USING 3X SUPPLIED #10 NUTS (DETAIL G).

10. (1011HS ONLY) INSTALL 1001 DRINKING FOUNTAIN ADAPTERS USING 2X SUPPLIED 3/8" NUTS (DETAIL H).

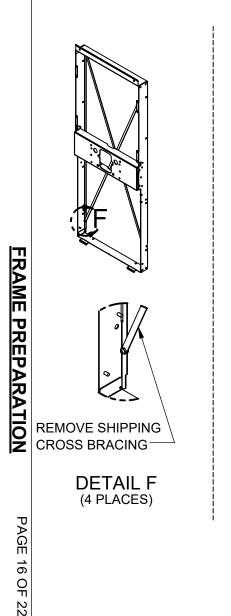

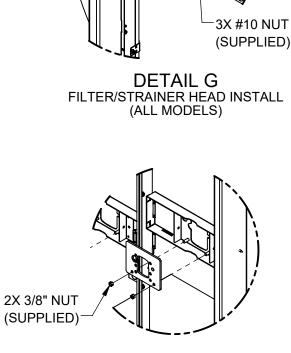

DETAIL H 1001 FOUNTAIN ADAPTER PLATE (1001/1011 MODELS ONLY)


		1455 KLEPP @ SPARKS, NEVA	
- (;)	Haws	(775) 359-4712 FAX	(775) 359-7424
	Since 1906	C E-MAIL: HAWS@H WEBSITE: WWW.H	
N: REV. ECN: BY: 5000 6000 DHP	MODEL(S) 1XXXHS, DUAL FOUNTAIN I		PART NUMBER 0510002203.D
AWN: DATE: CHK'D DHP 12/15/22 DHP	IAAAHS, DUAL FOUNTAIN I	NUDELS, REAR AUCESS	REVISION
PROVED: DATE:	·		1
JU 07/08/24	SCALE: 1:20 DRAWING TYPE:	INSTALLATION SIZE: A	SHEET 5 OF 11

REAR VIEW


22

© 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

ECN 60 DRA

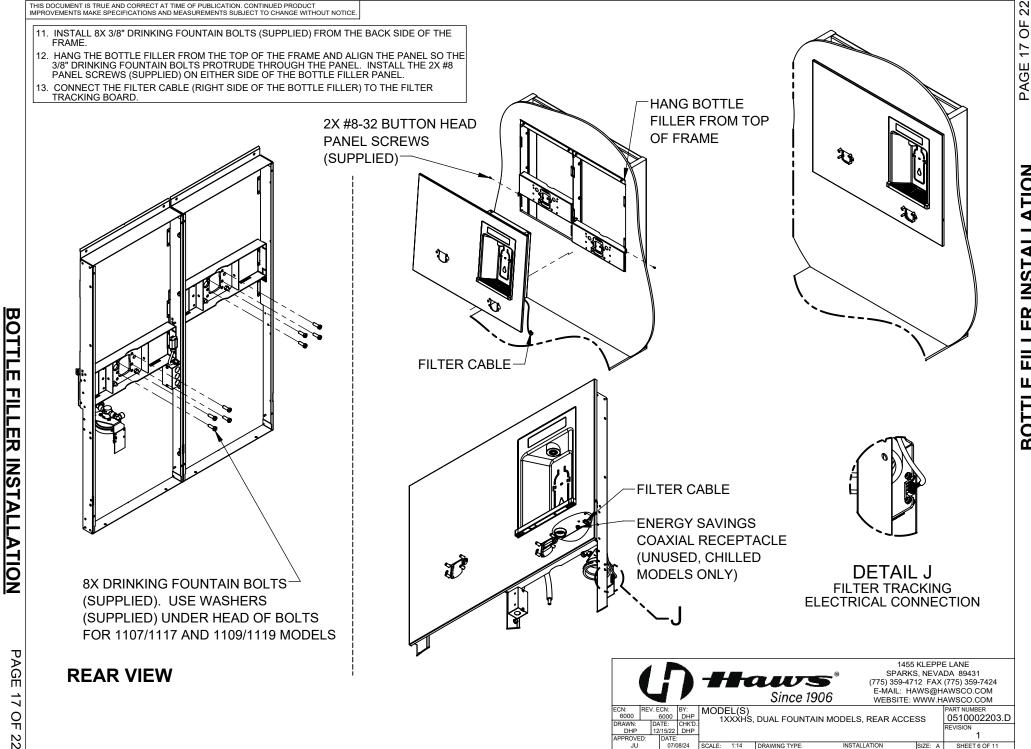

ATION INSTALI FILLER BOTTLE

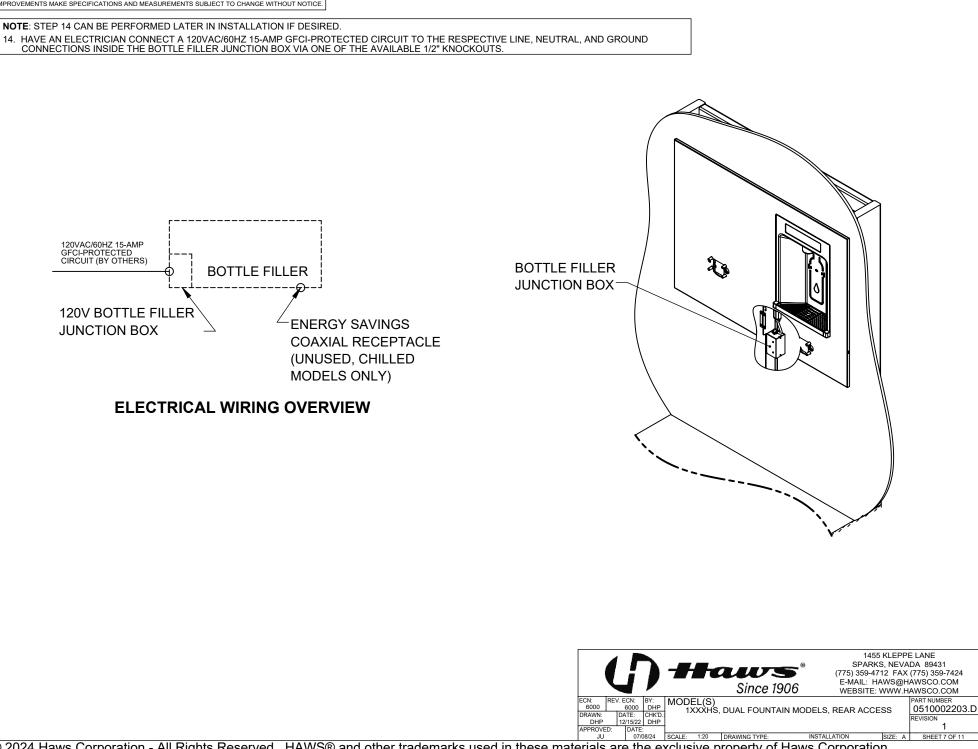

22 ЧO

100

PAGE

ELECTRICAL INSTALLATION

THIS DOCUMENT IS TRUE AND CORRECT AT TIME OF PUBLICATION. CONTINUED PRODUCT IMPROVEMENTS MAKE SPECIFICATIONS AND MEASUREMENTS SUBJECT TO CHANGE WITHOUT NOTICE.

PAGE 18

ę

22


ELECTRICAL INSTALLATION

© 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

THIS DOCUMENT IS TRUE AND CORRECT AT TIME OF PUBLICATION. CONTINUED PRODUCT IMPROVEMENTS MAKE SPECIFICATIONS AND MEASUREMENTS SUBJECT TO CHANGE WITHOUT NOTICE.


15. MOUNT THE DRINKING FOUNTAIN TO THE PROTRUDING 3/8" STUDS FROM STEP 11. INSTALL 4X 3/8" NUTS (SUPPLIED) PER DRINKING FOUNTAIN AND TIGHTEN FULLY (25 LB-FT).

16. INSTALL THE WASTE BEND (SUPPLIED), CUT TO LENGTH AS REQUIRED. REFER TO SHEET 3 FOR DRAIN HEIGHTS FOR EACH MODEL. SET LOWER COVER AND #8 PAN HEAD SCREWS ASIDE, THESE WILL BE INSTALLED ONCE THE WATER SUPPLY PLUMBING IS COMPLETE.

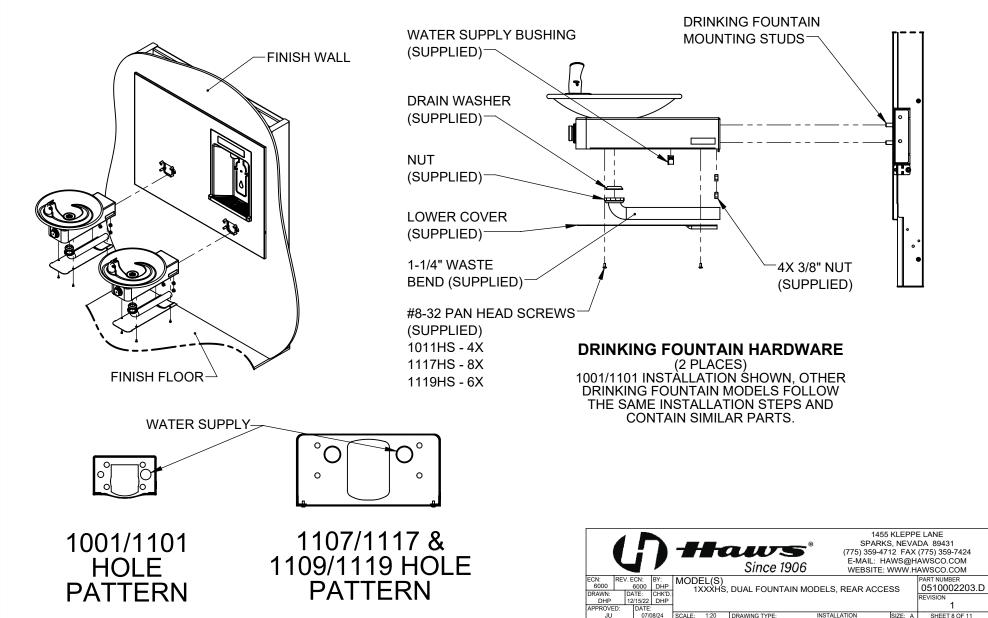


© 2024 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

DRINKING FOUNTAIN INSTALLATION

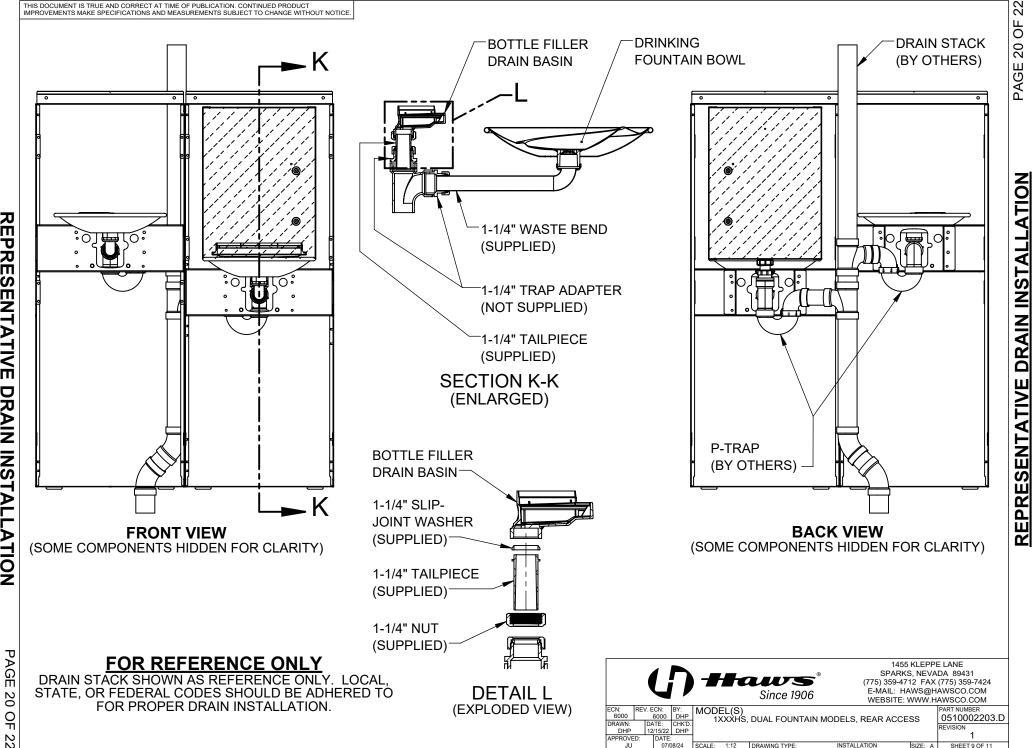



REPRESENTATIVE DRAIN INSTALLATION

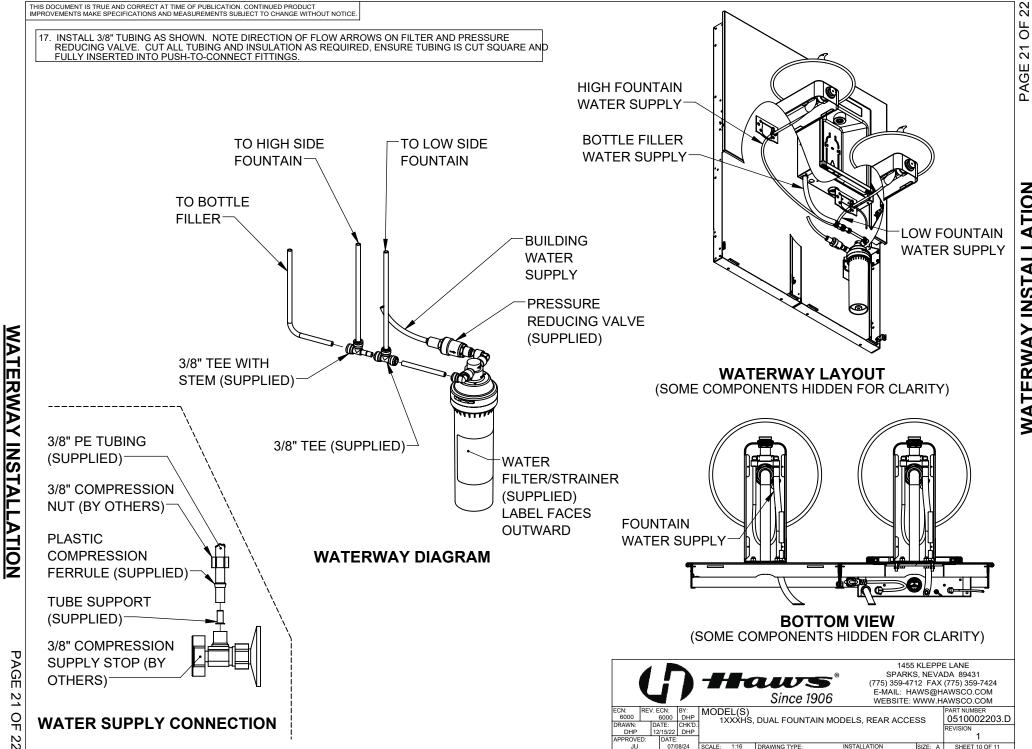

WATERWAY INSTALLATION

- 18. CONNECT THE NEMA 5-15P BOTTLE FILLER PLUG TO THE NEMA 5-15R RECEPTACLE. VERIFY THAT THE BOTTLE FILLER DISPLAY HAS POWERED ON.
- 19. INSTALL THE FILTER CARTRIDGE INTO THE FILTER HEAD.
- 20. INSTALL DRINKING FOUNTAIN LOWER COVERS WITH 4X #8 PAN HEAD SCREWS (SUPPLIED) PER FOUNTAIN.

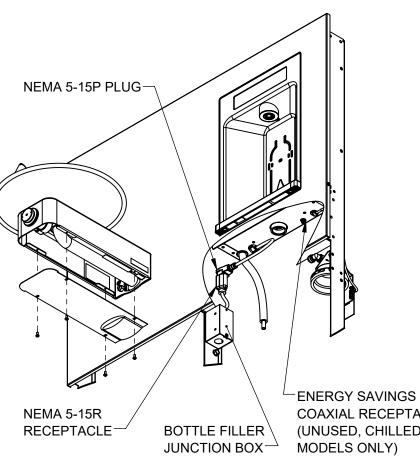

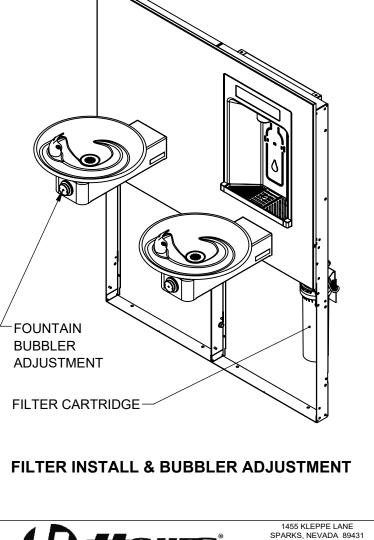

COAXIAL RECEPTACLE (UNUSED, CHILLED

ELECTRICAL CONNECTIONS AND DRINKING FOUNTAIN LOWER COVER (SOME COMPONENTS HIDDEN FOR CLARITY)



FINISHING STEPS