

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ◆Sparks, NV 89431-6467 ◆(775) 359-4712 ◆Fax (775) 359-7424 E-mail: haws@hawsco.com ◆website: www.hawsco.com

No. 0580002267 (1)

Model 1119FRB & 1119FRP DRINKING FOUNTAIN

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

CAUTION! Prior to making any electrical connections, verify with a voltmeter that power from the service panel is **off.**

LIMITED WARRANTY


HAWS warrants that all of its products are guaranteed against defective material or poor workmanship for a period of one year from the date of shipment. The foregoing notwithstanding, HAWS warrants certain specific products or components thereof for an adjusted period. A list of these excepted products and components and a description of their respective warranty terms may be found here: www.hawsco.com/warranty. HAWS' liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first-class workmanship, provided that a claim is made in writing to Company within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS shall not be liable for the cost of repairs, alterations or replacements, or the labor required to implement them, or for any expense connected therewith made by the owner or owner's agents, except upon written authority from HAWS. HAWS shall not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that HAWS has made no other warranties either express or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, incidental, or consequential damages claimed to arise under the contract of sale.


Equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. Any HAWS emergency equipment is intended to supplement first-aid treatment. Due to widely varying conditions, HAWS cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

EXCEPT AS EXPRESSLY STATED HEREIN, HAWS HEREBY DISCLAIMS ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY MAY NOT BE MODIFIED OR EXTENDED WITHOUT THE WRITTEN CONSENT OF HAWS. REMEDIES AND REPLACEMENTS STATED HEREIN ARE EXCLUSIVE. IN NO EVENT SHALL HAWS BE LIABLE FOR ANY SPECIAL, PUNITIVE, CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF USE OR PROFITS, SUBSTITUTE PRODUCTS OR COSTS, PROPERTY DAMAGE, OR OTHER MONETARY LOSS.

Models

Model 1119FRB

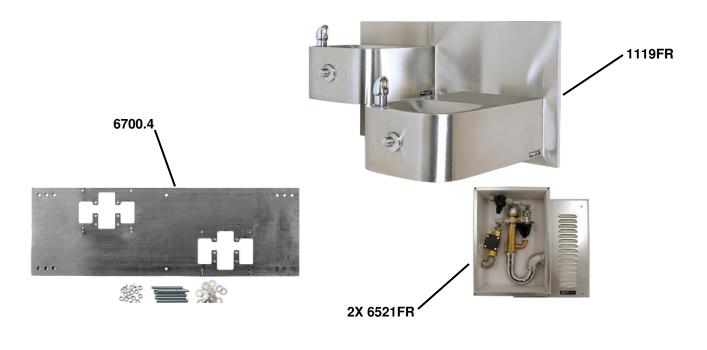

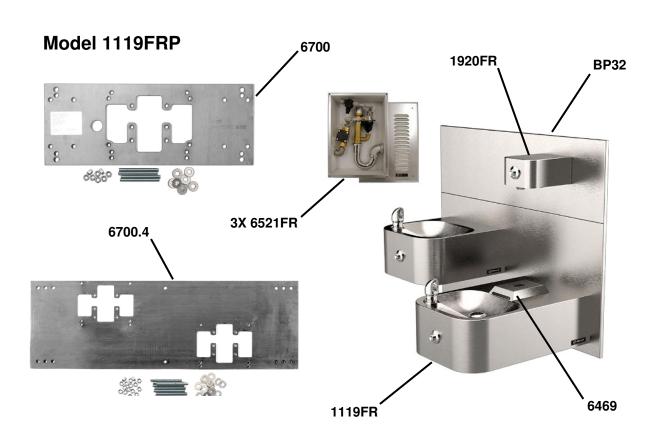

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:

TECHNICAL SUPPORT: 1-800-766-5612
FOR CUSTOMER SERVICE: 1-888-640-4297

RECOMMENDED TOOLS: Hack saw, pipe joint sealant, screwdriver, level, 12" adjustable wrench, 10" pipe wrench, 5/64", 3/32" and 5/32 " hex key wrench, 9/16", 1/2", 7/16" socket wrench or open-end wrench.

LOCATION OF UNIT: The Model 1119FR is a wheelchair accessible drinking water facility. The height dimensions shown meet current ADA requirements. When installing this unit, local, state or federal codes should be adhered to. If height other than shown is required, then dimensions must be adjusted accordingly.

SUPPLY LINE: The minimum recommended line size is 1/2" IPS with 30-90 psi (2-6 ATM) flowing pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.

PLUMBING CONNECTIONS: Inlet valves are 1/2" NPT (F). Waste trap outlets are 1-1/4" NPT (F) (located on 6521FR Valve Boxes).

MAINTENANCE: Refer to Operation & Maintenance Manual of each model for information.

PARTS LIST		
FOR MODEL 1119FRB	QUANTITY	ITEMS INCLUDED
1119FR	1	Drinking Fountain, Dual, L/Freeze Valves
6521FR	2	Valve. Freeze, Wall Mounted, W/Catcher
		Mounting Plate (includes Mounting Hardware for
6700.4	1	Bowls)
FOR MODELS 1119FRP	QUANTITY	ITEMS INCLUDED
1119FR	1	Drinking Fountain, Dual, L/Freeze Valves
6521FR	3	Valve. Freeze, Wall Mounted, W/Catcher
1920FR	1	Bottle Filler, Satin, Freeze Resistant
6700	1	Mounting Plate (includes Mounting Hardware for Bottle Filler Bracket)
0700	I	Mounting Plate (includes Mounting Hardware for
6700.4	1	Bowls)
6469	1	Strainer, 1920 Drip Tray
BP32	1	Back Panel for 1920

1119FRB/1119FRP INSTALLATION PROCEDURE

NOTE: The product manuals included in this bundle contain images and directions for various models and configurations. Please note that not all images and configurations are relevant to this bundle.

NOTE: This bundle provides all necessary parts for installation, except for mounting hardware for the 6700.4 & 6700 Mounting Plates & 6469 Drip Tray (on 1119FRP model).

Use this manual as a reference for setting up this bundle. Follow the steps below to complete the installation of the 1119FRB or 1119FRP bundle.

STEP 1: Install Mounting Plate(s) (6700.4 & 6700)

Locate and install the 6700.4 and/or 6700 Mounting Plate(s) (both models only include Mounting Hardware for Bowl/Bracket) using the installation instructions located in the 6700 and 6700.4 product boxes. 6700R Mounting Plate (optional) can be used if needed for 1920FR.

STEP 2: Install Drinking Fountain (1119FR) & Dual Back Panel (supplied)

Locate and mount the fountain and dual Back Panel (supplied) on the wall using the installation instructions located in the 1119FR product box.

STEP 3: Install Bottle Filler Back Panel (BP32) & Bottle Filler (1920FR)

For Model 1119FRB, skip this step.

Install the BP32 Back Panel and 1920FR bottle filler onto the 6700 (in-wall) Mounting Plate (supplied) or the 6700R (on-wall) Mounting Plate (optional). Use the installation instructions located in the BP32, 1920FR, and 6700 or 6700R product boxes.

STEP 4: Install Freeze Resistant In-Wall Valves (6521FR)

Install the 6521FR Freeze Resistant In-Wall Valve (qty. 2 required on 1119FRB and qty. 3 required on 1119FRP) using the installation instructions located in the 6521FR product boxes.

STEP 5: Install Strainer 1920 Drip Tray (6469)

For model 1119FRP only.

Attach the 6469 Strainer 1920 Drip Tray with an appropriate fastening method, using the installation instructions located in the 6469 product box.

Refer to the troubleshooting guide within the appropriate product manual for any issues.

© 2024 Haws® Corporation – All Rights Reserved HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.